

Instructions For Use



RZ3™ Safety Cutter

Blade Change

Using the SP0-17 single-notch blade



Rotate blade change wheel counterclockwise until cutter body opens.



Remove Spare Blade from blade compartment.



Insert Blade underneath blade retainer, aligning blade notch with alignment tab. Close cutter body, rotating wheel clockwise to tighten. Dispose of used blade safely.

Proper Cutting Techniques



Push button forward to expose blade. Place opposite hand out of the path of the cut.



Press blade firmly into cutting surface to start the cut.



Release thumb pressure and place thumb on cutter body and continue the cut. Friction will maintain blade exposure. Blade will automatically retract at the end of the cut.



Direct Power Cuts
Slide top button forward to extend blade, holding cutter as shown. Blade will retract automatically when button is released.

For Information Call: (800) 229-2233
Email: info@go-phc.com
Website: www.go-phc.com/rz3



PHC
PACIFIC HANDY CUTTER®

Working Safe Everyday.™